

PLEASE READ AND SAVE THIS USE AND CARE BOOK.



Commercial Rice Cooker



Consumer Assistance & Information in the US only
1-800-439-7977

Modelos / Models
CPRC25

Important Safeguards

When using electrical appliance basic safety precautions should always be followed including the following:

- *Read all instructions.
- *Do not touch hot surfaces. Use handles or knobs.
- *To protect against electrical shock, do not immerse cord, plug or base unit in water or other liquid.
- *Close supervision is necessary when any appliance is used by or near children.
- *Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- *Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- *The use of accessory attachments not recommended by this appliance manufacturer may cause injuries.
- * Do not use outdoors.
- *Do not let cord hang over edge of table or counter, or touch hot surfaces.
- *Do not place on or near a hot gas or electric burner, or in a heated oven.
- *Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
- *Always attach plug to the appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- * Do not use appliance for other than intended use.


COMMERCIAL USE ONLY SAVE THESE INSTRUCTIONS

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. An extension cord may be used with care; however, its marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not drape over the counter or tabletop, where it can be pulled on by children or tripped over.

CAUTION-To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Product may vary slightly from what is illustrated.

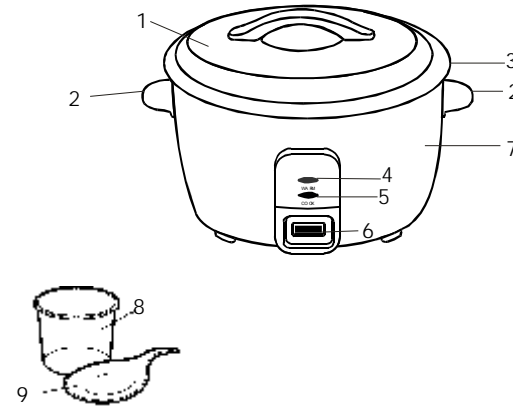

- | | | |
|------------------------------|-------------------------|-------------------------------------|
| 1. S/S lid with glass middle | 2. Side handles | 3. Inner pot with water level marks |
| 4. Warm indicator light | 5. Cook indicator light | 6. "On" switch |
| 7. Outer pot (Base) | 8. Measuring cup | 9. Serving scoop |

Important Information

Important: For warranty verification, please do not remove line cord sticker.

- *Read all instructions.
- *Wash inner pot, lid, measuring cup and serving scoop in warm, soapy water. Rinse and dry thoroughly.
- *Never immerse outer pot in water.
- *Never place liquid in the outer pot; place it only in the inner pot.
- *Never try to force cook lever to stay in the COOK position after it has shifted automatically to the WARM position.
- *Always place inner pot inside outer pot before plugging in the rice cooker.
- *When plugging in the cooker, always be sure inner pot contains liquid, or be ready to add oil, butter or margarine immediately to the inner pot.
- *Save these instructions and refer to them often.

NOTE: Always wipe down the outer surface of the inner pot before placing it inside the cooker. Any moisture remaining on inner pot surface may cause a crackling noise while the unit is heating up. Except for actual cooking area, keep all surfaces dry to prevent damage to the inner working of the appliance while it is in operation.

How to Use

This appliance is for commercial use only. It may be plugged into a standard electrical outlet.

The measuring cup provided is based on 160g.

1. Before placing the inner pot into the cooker, be sure the heating plate and outside surface of the inner pot are clean and dry. Do not allow loose rice or food particles to fall into the cooker. The inner pot must fit snugly onto the heating plate to ensure proper contact for cooking. Place desired amount of rice into the inner pot. Add cold water up to the exact level indicated inside of the inner pot. Pls refer attached table. By adding too much water you may cause the unit to boil over.

Pls see the below table for the proportion of raw rice to water to use.

Model No.	Uncooked Rice qty (Using Cup Provided)	Water with Measuring Cup Provided
CPRC25	5cups	8cups
	8cups	10cups
	10cups	12cups
	15cups	17cups
	20cups	22cups
	25cups	28cups

Remarks: The above information is just for your reference. You can choose add or reduce the water as per your demands for cooked rice .

2. Taste/hardness will vary depending on the quality / type of rice and length of time it is cooked. For a softer, fluffier rice add a little more water; for finer, crunchier rice add a little less water. You may need to experiment to suit your taste. Note that brown rice takes longer to cook than white rice and requires more water.
3. Place the lid on the rice cooker. Plug it into a standard electrical outlet. The WARM indicator light will come on. Push the "ON" switch down and the COOK indicator light will come on. As the rice expands and cooks, steam will come out of the vent in the lid. Do not place the cooker directly under your cabinets. Slight spattering is normal.
NOTE: Cooking will begin only when the "ON" switch is pushed down and the inner pot is in position in the unit.
4. When cooking is done, the cooker will automatically switch to WARM (the warm indicator light will come on) and will continue until the unit is unplugged. Rice can be kept warm for several hours. For best results, let the cooked rice sit for 15 minutes before stirring or removing. This allows the steam to finish the cooking process.
NOTE: Do not try to prevent the cooker from switching to the WARM cycle. Do not immediately depress the switch again after it has begun the WARM cycle.

5. Fluff rice with a plastic or wood utensil and mix in ingredients such as minced vegetables, if desired.
6. When done, unplug the unit. Always clean the cooker thoroughly as soon as possible after each use.

Points to remember

- *Do not operate the rice cooker without water.
- *Avoid placing unit under any wall cabinets when operating, as much steam is generated. Avoid reaching over the unit when it is operating.
- *Use clean water to fill water reservoir before each use. Do not use wine, broth or other liquids. Do not add anything to the water.
- *Cooking times are estimates and depend on the quantity, size, desired degree of doneness and temperature of food.
- *Cooking times may lengthen/shorten according to personal taste.
- *Use hot pads or oven mitts when removing the lid from the rice cooker. Open the lid carefully to allow steam to escape safely.
- *A bit of water may remain in water reservoir after the rice cooker is turned off. This is normal.
- *Do not use any parts in microwave or on any cooking/heated surface.
- *Unplug after cooking.
- *Allow the unit to cool before cleaning.

Cleaning Instruction

This product contains no user serviceable parts. Refer service to qualified service personnel.

UNPLUG CORD FROM OUTLET BEFORE WASHING, ALLOW RICE COOKER TO COOL

NEVER IMMERSE OUTER POT IN WATER

TO CLEAN OUTER POT, INNER POT, COVER, MEASURING CUP AND SPOON

For the body(outer pot): use damp clothes or sponge to wipe clean

For the inner pot: use warm or hot water to soft the dry-rice first, then wash with dish-washer- liquid.

For the cover, spatula, measuring cup: wash with dish-washer- liquid.

NOTE: The dish-washer- liquid shall comply with the Code of Federal Regulations 21 CFR, part 178.1010.

Important

- *When cooking a small quantity of rice, be sure to add the correct amount of water to avoid boiling over. Do not keep small amounts of rice warm in the cooker for extended periods.

*As rice cooks, a thin crust may develop on the bottom of the cooking bowl. This crust is chewy and many people enjoy eating it. With parboiled and brown rice the crust may be browned on the bottom. The crust can easily be peeled off and discarded, if preferred.

*Use the serving scoop (or a wooden spoon or paddle) to stir and remove rice-don't use metal utensils that can scratch or dent the cooking bowl.

To store

1. Unplug unit.
2. Store in its box in a clean, dry place.
3. Never store it while it is hot or still plugged in.
4. Make sure to clean before storing.
5. Never wrap cord tightly around the appliance.
6. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.